



Floor and Flat Truss Depths in iModel

Adding floor trusses and flat trusses to a layout requires setting a specific depth in the Job Settings prior to entering the trusses. The SY42/Flat Depth field is found on the Truss tab, under the Misc. Options.

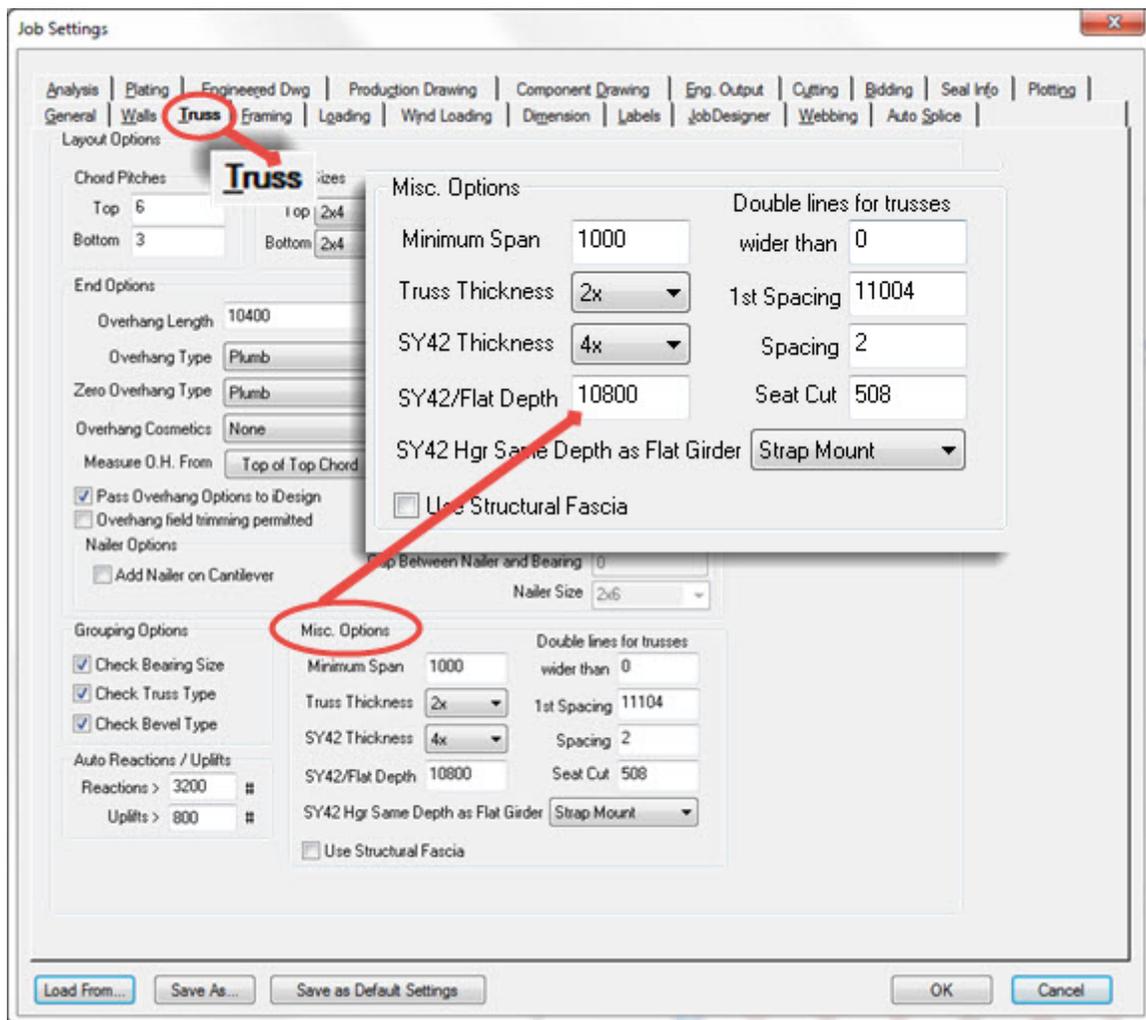


It can also be set in the Truss Options, or the Add Truss toolbar.


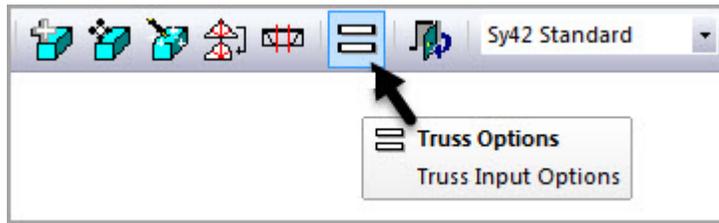


Occasionally, the depth of the floor and flat trusses needs to be changed after it has been added to the layout. This change can be made using Modify Truss, which is found on the truss toolbar.

To change the truss depth, first select the Modify Truss icon and then select the trusses to modify as prompted.

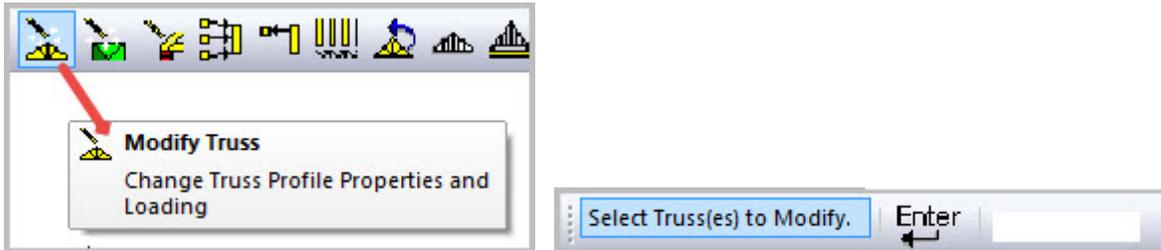

Next, select the Misc tab and enter the new depth in the field. Last, select the OK button to apply the changes.

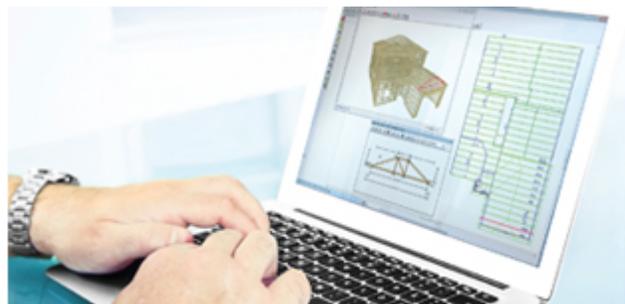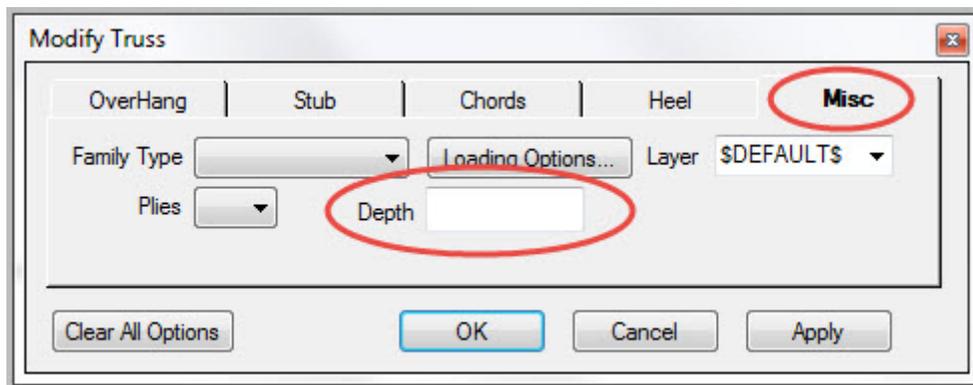

We hope you found this topic valuable. If you have any questions or a suggestion for an upcoming article please email us at training@alpineitw.com.

For technical assistance, please call the Alpine Help Desk at (866) 237-2878.

Events

Alpine, an ITW Company, 155 Harlem Avenue, Glenview, IL 60025