

Dear Reader,

In the latest InsideVIEW edition we inadvertently failed to mention that the feature being highlighted is intended for wall panel design and therefore requires iPanel to be activated. We apologize for any confusion or inconvenience this may have caused.



Optimizing Component Design Production


January 2018

How to Auto Dimension When Adding Walls


Designers can choose to have dimensions automatically applied to their walls as they add the walls to their layout. This enables a designer to easily see and correct wall input as they work, rather than after all walls have been added.

To activate Auto dimension, open the Job Settings Menu, and then select the Dimension Tab. Turn on 'Auto dimension when adding walls' by checking the box. Once these settings have been saved, you will see dimensions automatically added to your layout as you add your walls.

The dimensions added using the Auto dimension setting represents the actual length of the wall, not the corner to corner dimension of the building.

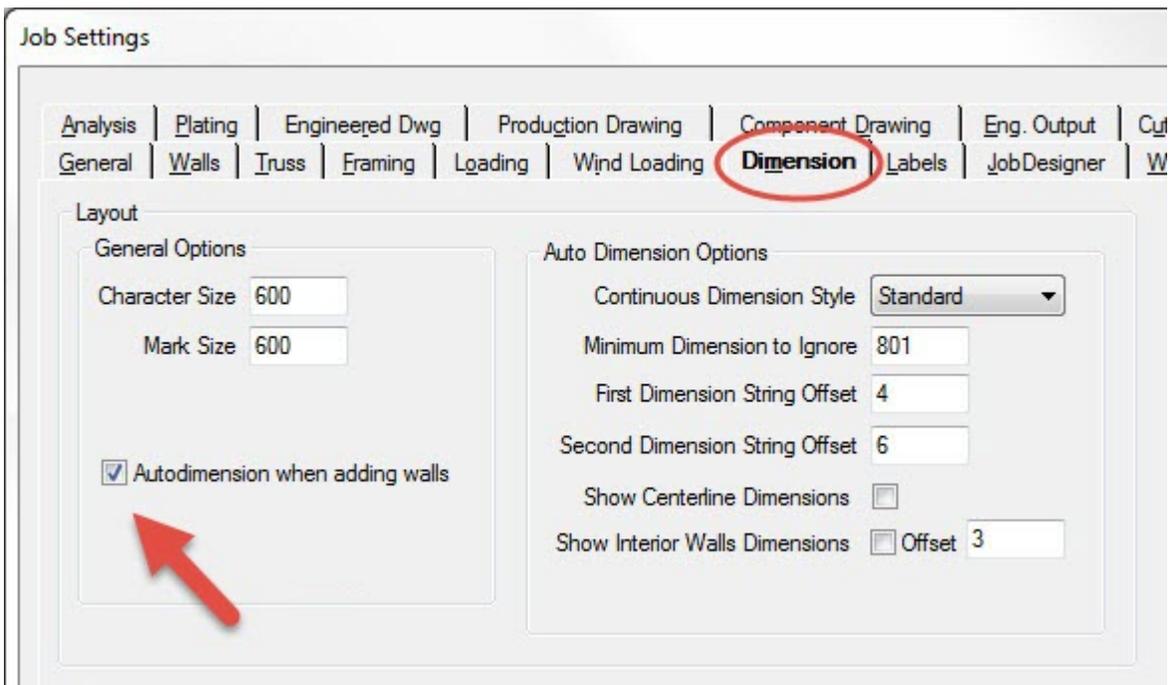

The Auto dimensions can be moved, edited and deleted using the dimension toolbar the same as manually added dimensions.

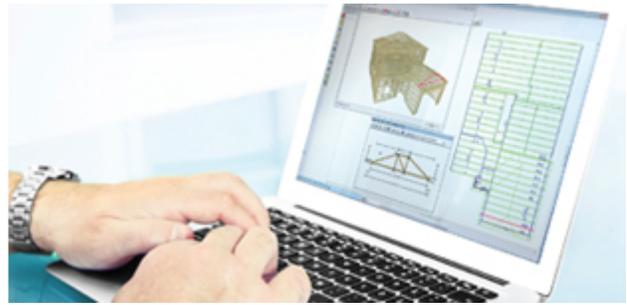

Do you know a handy shortcut or have a useful tip or trick to share?
Please email us at training@alpineitw.com.

For technical assistance, please call the Alpine Help Desk at (866) 237-2878.

[Website](#) [Products](#) [Services](#) [Resources](#) [About](#) [News & Events](#)