


Adding the Vertical Web in a K-Web


Many versions of IntelliVIEW have offered an easy tool to add K-Webs, but past functionality required that a vertical web be added manually prior to adding the "K" webbing. Current functionality offers the flexibility to add the vertical web as part of the k-web entry process.

In iDesign, the Add K-Web tool can be found on the Webs toolbar.

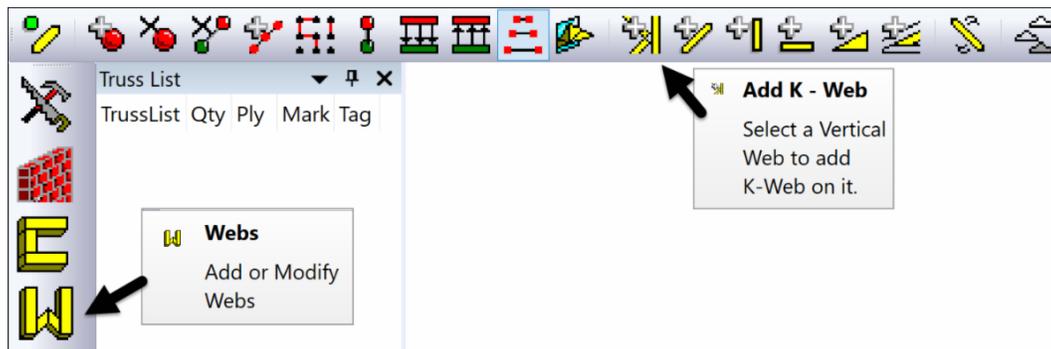


Click the icon on the toolbar, and the system prompts to "Select side of a vertical web to add a k web on it" Click just to the side (not on) the vertical needing support.

Select a side of a vertical web to add a k web on it.

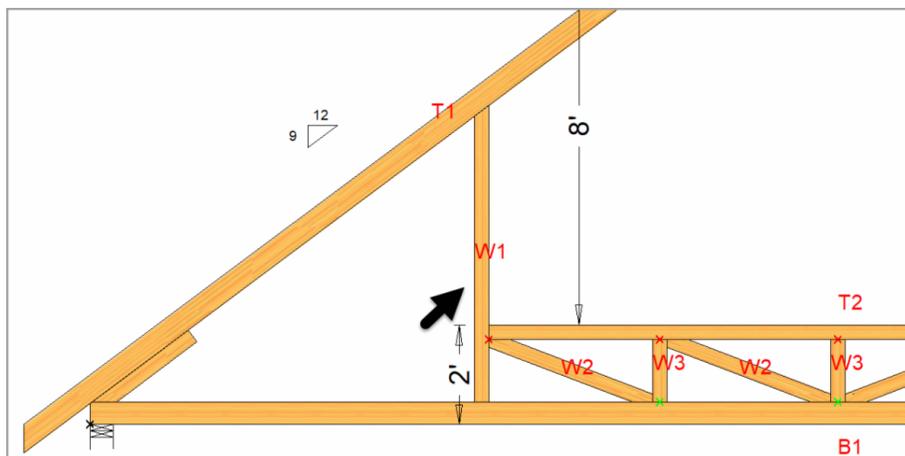

An "x" indicating the joint location will appear on the vertical.

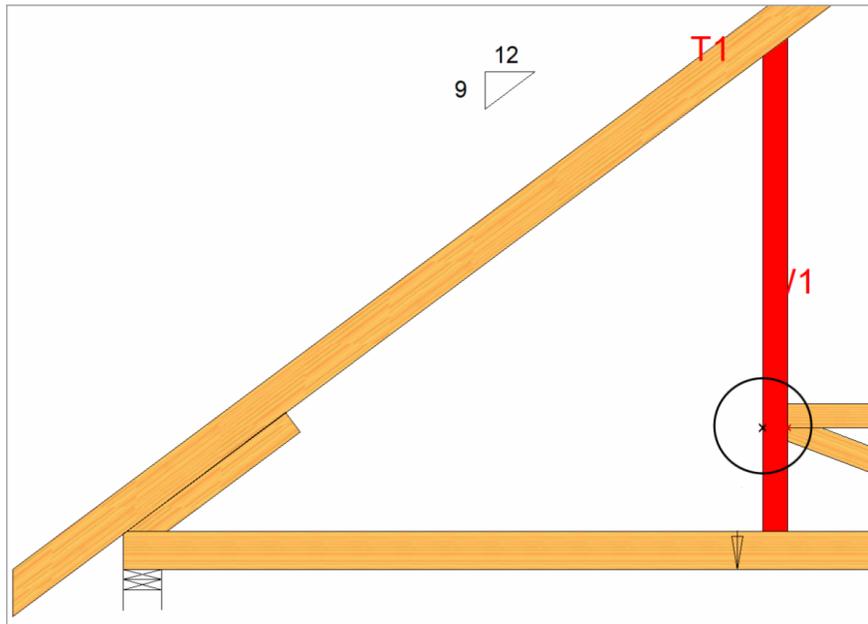


The system then prompts to "<Enter> to use joint default location, Or Select a point to change the default location."

<Enter> to use joint default location, Or Select a point to change the default location.


After selecting <Enter>, the system prompts "Select a point to add a vertical for K web, Or type a distance to add a vertical for K web."

Select a point to add a vertical for K web, Or type a distance to add a vertical for K web.

Click a location in the panel or type a distance to the edge of the vertical. 3 foot is used for this reference.

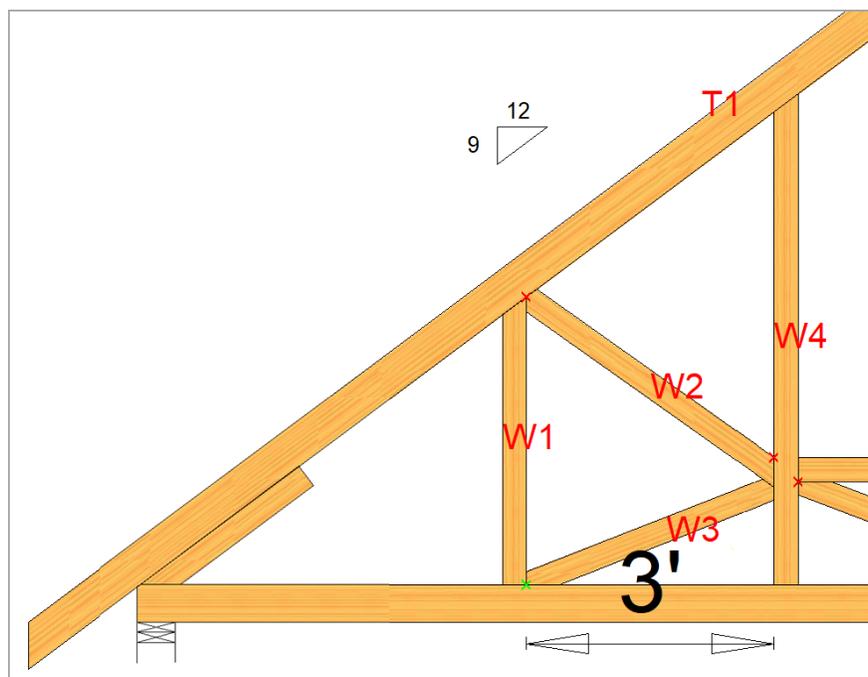

Having the vertical entry incorporated into the tool allows a designer to eliminate an extra step, making more efficient use of their time.

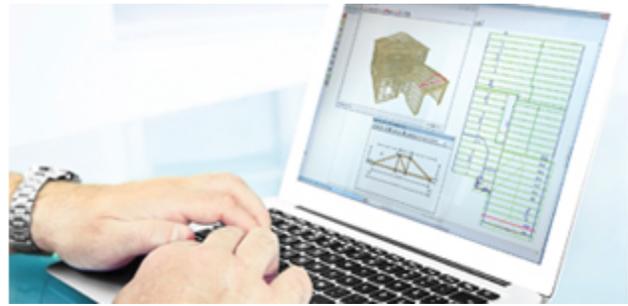

We hope you found this topic valuable. If you have any questions or a suggestion for an upcoming article please email us at training@alpineitw.com.

For technical assistance, please call the Alpine Help Desk at (866) 237-2878.

[Website](#) [Products](#) [Services](#) [Resources](#) [About](#) [News & Events](#)

Alpine, an ITW Company, 155 Harlem Avenue, Glenview, IL 60025