



### Using the Toggle Webs/Gable Studs Tool in iDesign


Designers often find it easier to add a vertical web to represent a stud in an odd pattern gable truss; however, most want to ensure that all gable studs are labeled alike for production. The Toggle Webs/Gable Studs tool allows us to easily change vertical studs from a web designation to a gable stud designation. This tool can be found in iDesign on the Edit Tools toolbar.

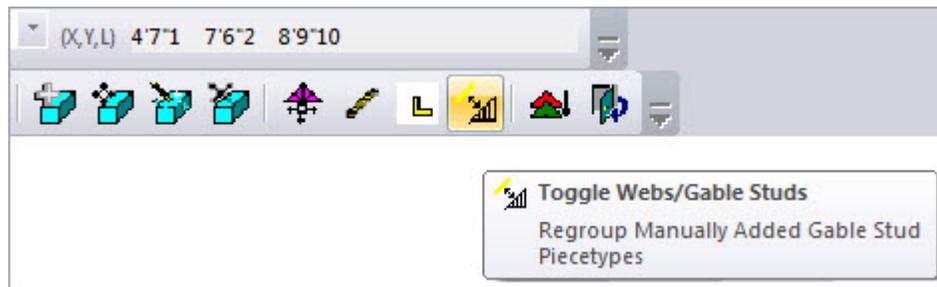



In the following example, a transition gable is added on the right side of the common truss using the gable tool in iDesign. We start by adding a partial gable from the peak of the truss to the right heel. [Figure 1]

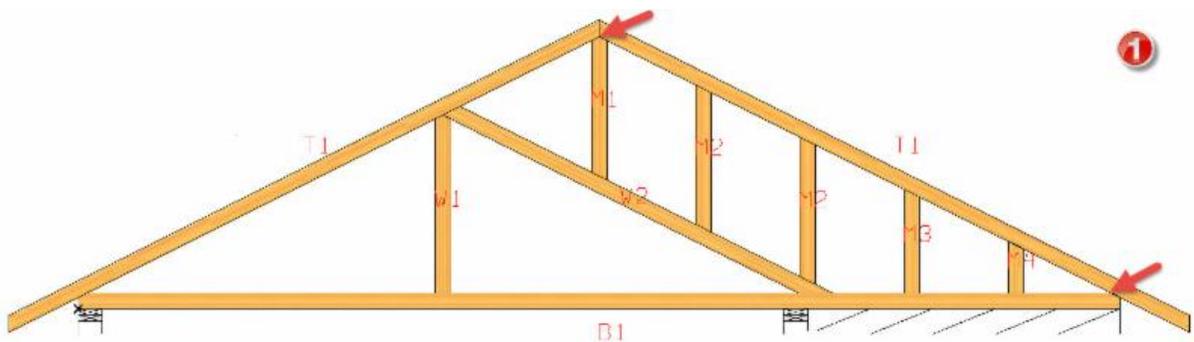


Next, we add a vertical web 2 foot left from the the first gable stud (M1) by measuring from a reference point at the peak of the truss. The system adds the vertical web, labeled W3, as shown. [Figure 2]

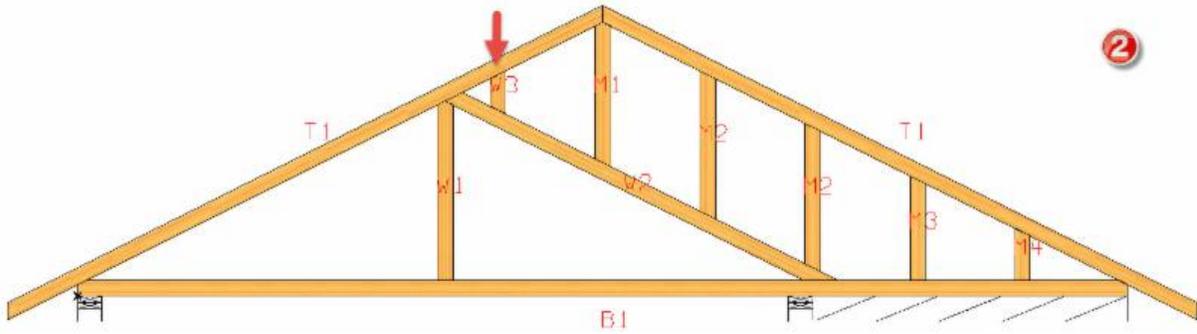


Now we select the Toggle Webs/Gable Studs tool on the Edit Tools tool bar. The existing gable studs are highlighted in red, and the system prompts us to "Select pieces to toggle between webs/gable studs (gable studs red). [Enter when done.]" [Figure 3]

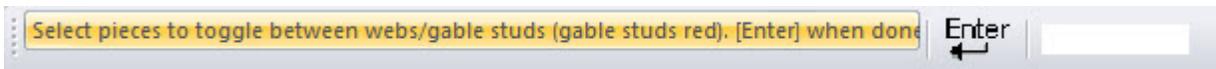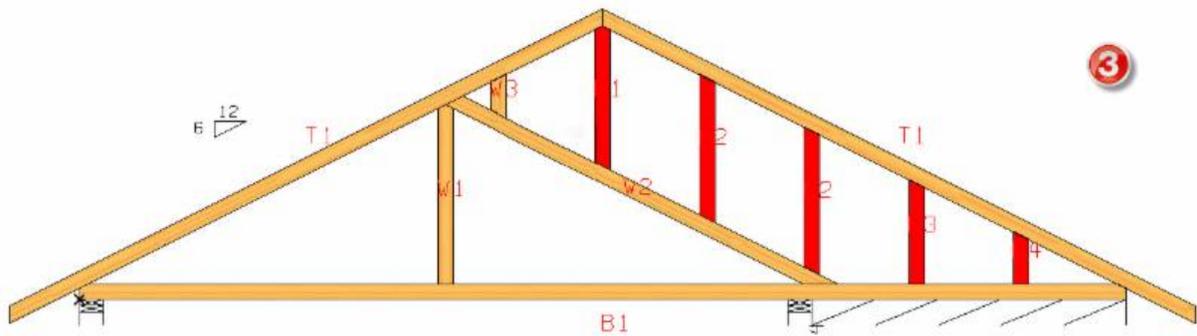


Select the vertical web W3 so that is also highlighted in red. [Figure 4]

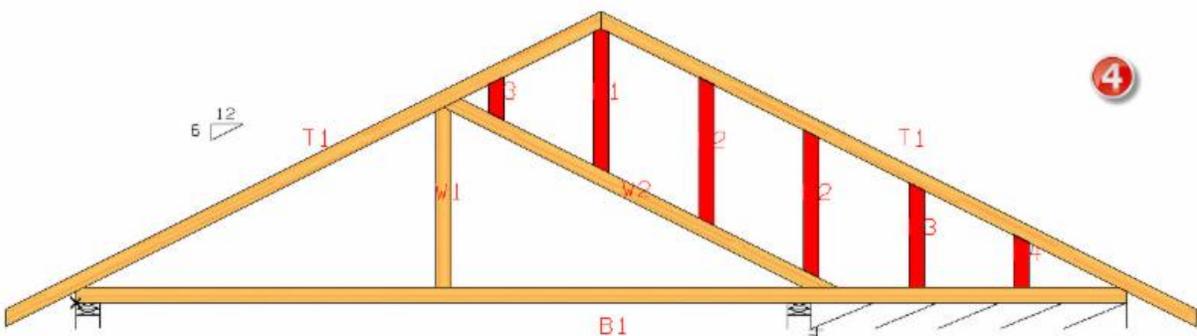

Last, we press Enter to change the W3 web to a gable stud. [Figure 5]

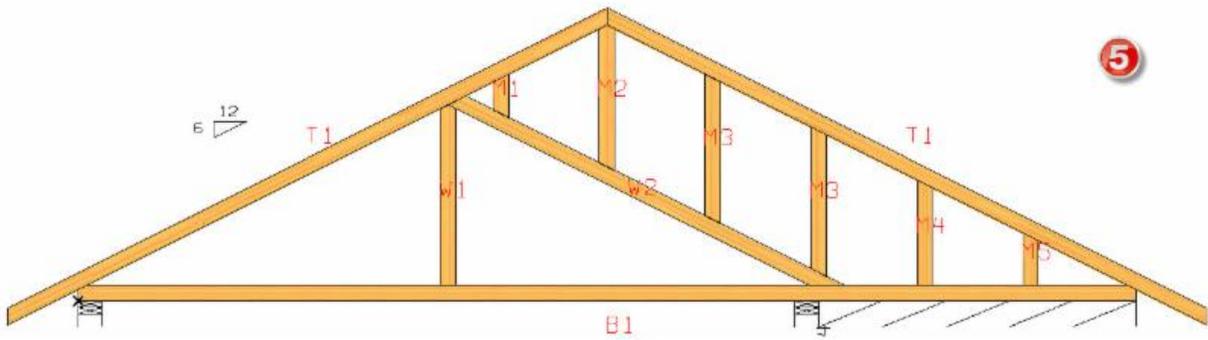

[Click here to view Toggle Webs/Gable Studs tool video clip](#)

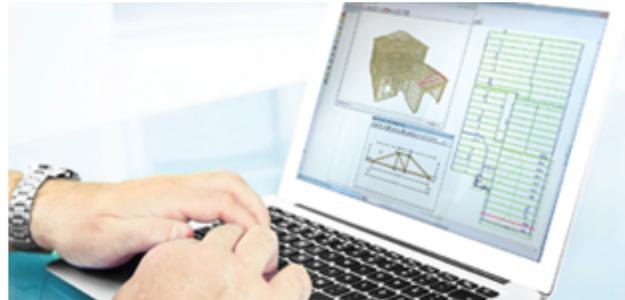

Do you know a handy shortcut or have a useful tip or trick to share? Please email us at [training@alpineitw.com](mailto:training@alpineitw.com).

For technical assistance, please call the Alpine Help Desk at (866) 237-2878.

[Website](#)   [Products](#)   [Services](#)   [Resources](#)   [About](#)   [News & Events](#)